


1

MDS143 Battery Replacement Instructions


Undo the five screws shown

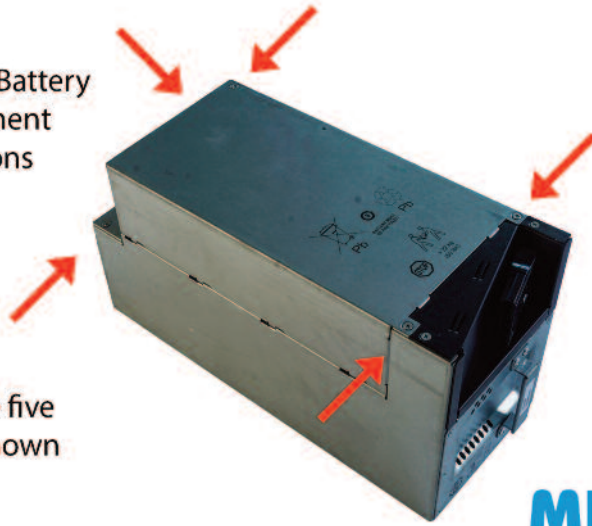

2

Slide back the metal cover


Lift off the metal cover

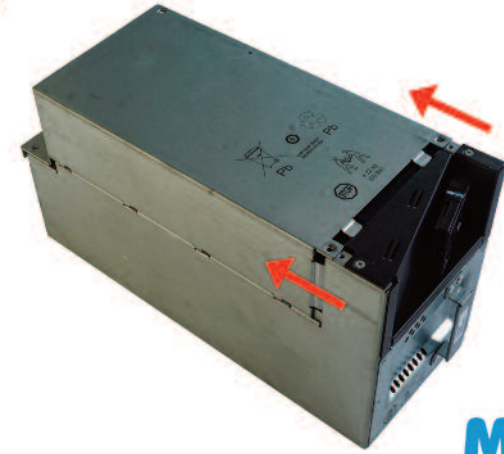

3

Now remove the plastic cover


Take care to never touch any of the battery contacts together or let them touch the metal tray

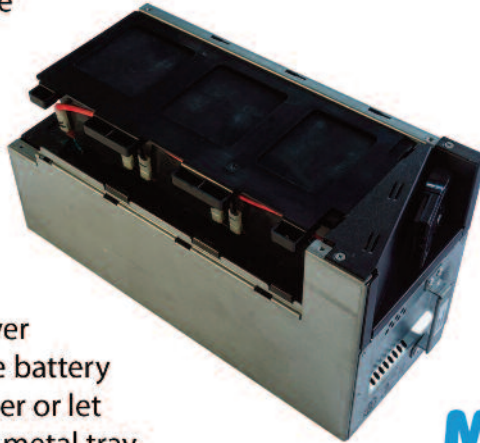

4

Carefully detach the long red cable

Now detach the short black cable

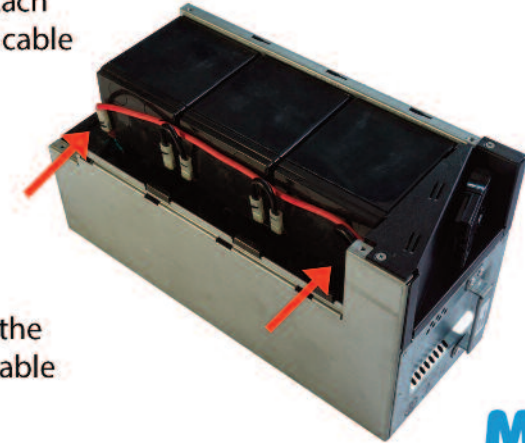


MDS143 Replacement Battery Pack Fitting Instructions



5

You will now have access to the batteries

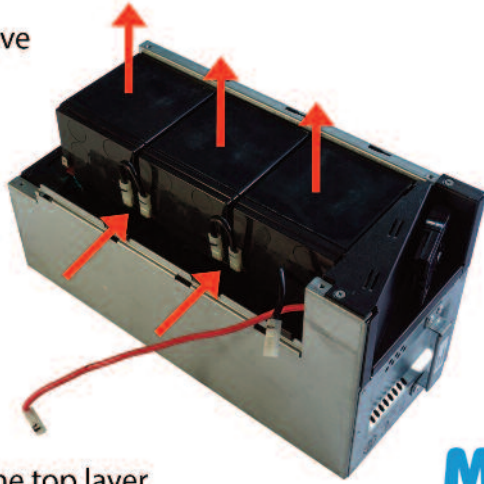


Remove the connectors and lift out the 3 batteries on the top layer



6

Remove the connectors shown

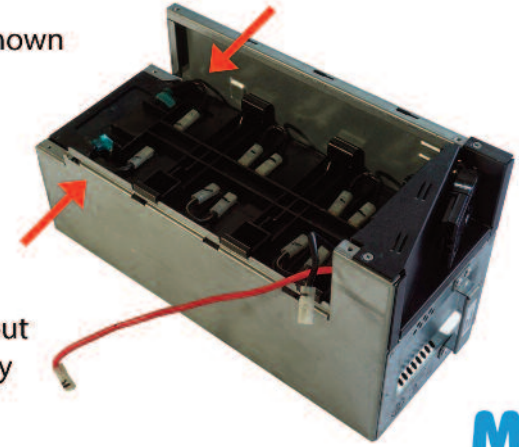

Carefully lift out the plastic tray



7

Remove the remaining battery connecting links




Carefully lift out the seven batteries on the lower layer



8

You now have the bare cartridge

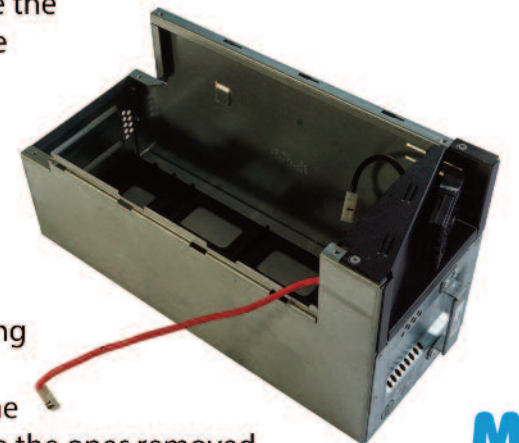

Start by placing seven new batteries in the tray to replace the ones removed




MDS143 Replacement Battery Pack Fitting Instructions



9

Having fitted the seven new batteries


Replace the battery connecting links

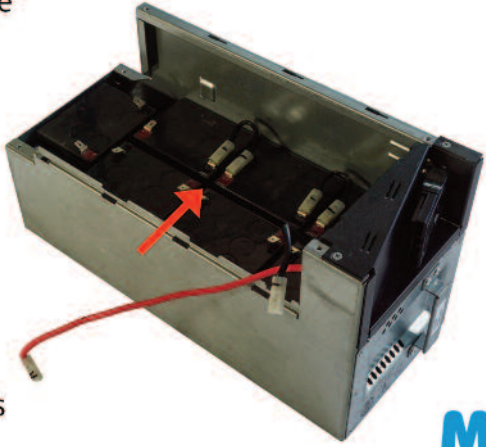

10

Place the plastic tray back in position


Replace the final connectors

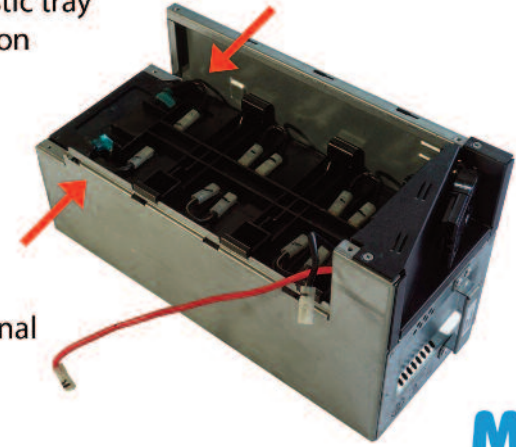

11

Place the last three new batteries in position


Replace the battery connectors

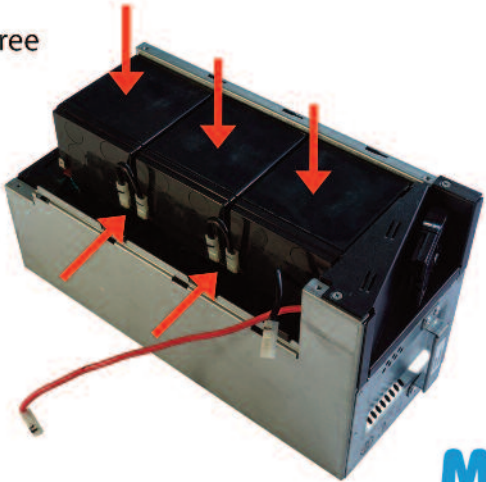

12

Re-connect the short black cable

Re-connect the long red cable

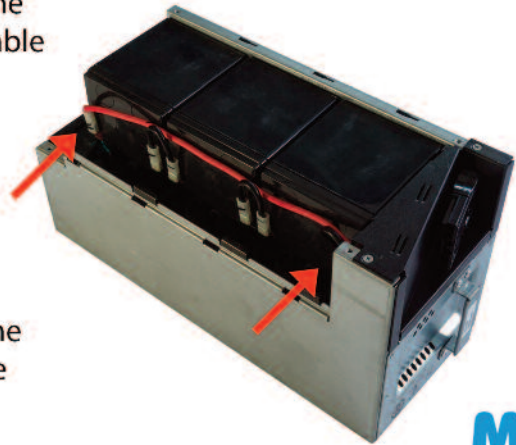

MDS143 Replacement Battery Pack Fitting Instructions



13

With all the battery connectors back in place




Now replace the black plastic tray



14

Replace the metal cover

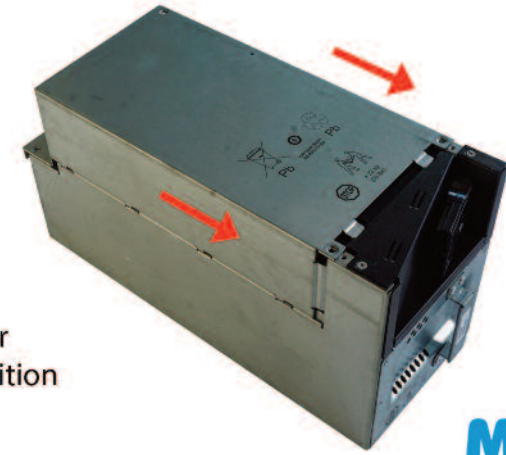


Slide the cover back in to position



15

Replace the five screws shown

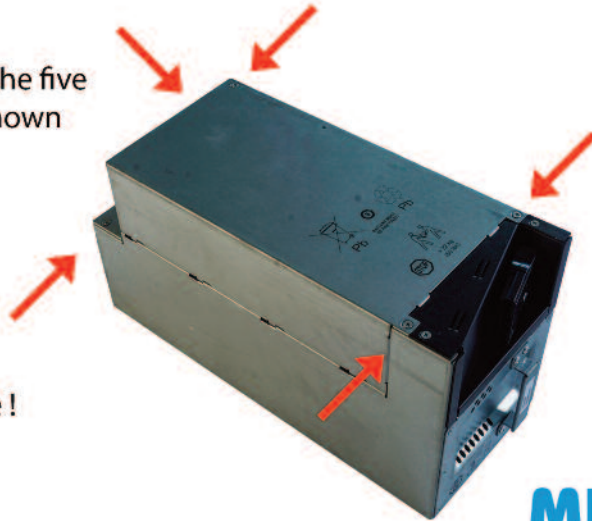

Job Done !



If you have any queries or require any support please contact us on

Freephone 0800 310 2100

Email sales@mdsbattery.co.uk

MDS143 Replacement Battery Pack Fitting Instructions

